

Kezelési útmutató

dyras

Elektromos kávédaráló
Modell: CFFG-250WH




**Kérjük, használat előtt figyelmesen olvassa el a
használati útmutatót!**

FONTOS BIZTONSÁGI TUDNIVALÓK

- Ha a készüléket felügyelet nélkül hagyja, illetve összeszerelés, szétszerelés vagy tisztítás előtt mindig húzza ki a hálózathoz!
- A készüléket gyermekek nem használhatják. Tartsa a készüléket és vezetékét gyermekektől elzárva!
- A készüléket csak azon csökkentett mentális vagy fizikai képességű személyek használhatják, akik megfelelő felügyelet alatt vannak vagy megfelelő útmutatást kaptak a készülék biztonságos használatához.
- Gyermekek nem játszhatnak a készülékkel!
- Ha a tápkábel sérült, akkor a veszély elkerülése érdekében a szervizzel fel kell venni a kapcsolatot, a sérült, vagy nem jól működő kábelt ki kell cserélni!
- Ez a készülék háztartási és hasonló célokra szolgál például:
 - üzletek személyzeti konyhájában;
 - az ügyfelek által a szállodákban, motelekben és más lakossági típusú környezetekben;
- A készülék csak az itt leírt háztartási használatra szolgál, minden egyéb (iparszerű) felhasználás nem megengedett!
- Kapcsolja ki a készüléket és húzza ki a hálózati dugót a tartozékok cseréjekor!
- A fedelet és a tartályt tisztítsa kefével vagy száraz ruhával. A fedél hideg vagy meleg vízben is mosható. A készülék többi részét száraz vagy enyhén nedves ruhával tisztítsa, ügyelve arra, hogy kihúzta a hálózati csatlakozót tisztítás előtt.
- Ne helyezzen üzembe hibás készüléket!
- A készülék biztonságos üzemeltetése érdekében csak a kezelési útmutatóban megadott információk szerint szerelje össze, majd csatlakoztassa és a használati útmutató alapján használja.
- Húzza ki a hálózati kábelt a fali aljzathoz:
 - ha probléma lép fel a használat során,

- amikor a termék nincsen használatban,
 - tisztítás előtt.
- Ne érintse meg a mozgó alkatrészeket!
- A gyártó által nem ajánlott, vagy nem a gyártó által eladott kiegészítők használata tüzet, áramütést vagy sérülést okozhat.
- Ne húzza a csatlakozókábelt éles széleken keresztül, a kábel ne érintkezzen forró felülettel (beleértve a sütőt), és ne használja rajta!
- A csatlakozókábel ne legyen nyílt tűz vagy fűtött főzőlapok közelében!
- A készülék javítását bízza a gyártó által kijelölt szakszervizre!
- Csak héj nélküli magokat őröljön vele!
- A termék folyamatos működési ideje maximum 30 másodperc. 30 másodperc folyamatos működtetés után legalább 2 percig ne használja a gépet. A termék 3 egymás utáni használata után egy 30 perces szünet szükséges!
- A terméket soha ne merítse vízbe vagy más folyadékba!
- A pengék rendkívül élesek, csak fokozott óvatossággal érintse meg!
- Húzza ki a készüléket az áramforrásból, mielőtt bármilyen részét eltávolítaná!

A KÉSZÜLÉK FELÉPÍTÉSE

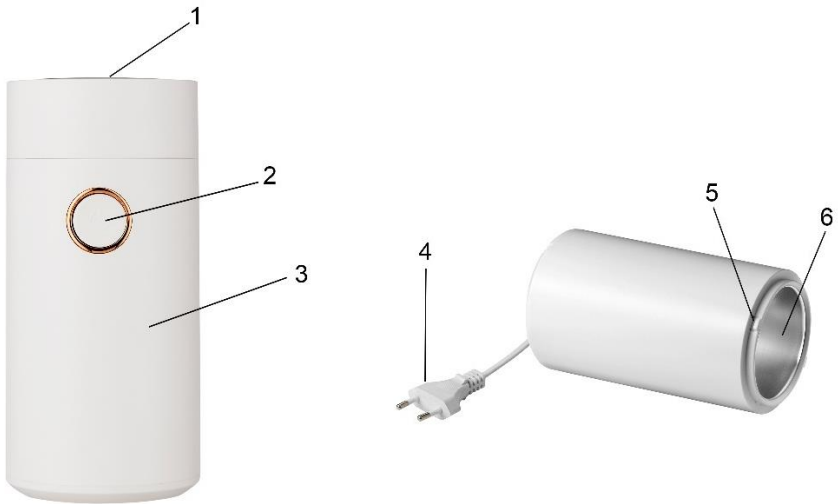

1. Átlátszó fedél
2. Ki-/Bekapcsoló gomb
3. Készülék ház
4. Tápkábel
5. Biztonsági záróelem
6. Kávétartály

A KÁVÉDARÁLÓ HASZNÁLATA

1. Első használat előtt távolítsa el a csomagolást, majd tisztítsa meg a készüléket a „Tisztítás” fejezetben leírtak szerint!
 2. Töltse fel a tartály részt a kívánt mennyiségű szemeskávével vagy fűszerrel, magokkal, maximum 40 grammal. Tegye rá a fedelet a készülékre és csavarja a helyére!
 3. Nyomja meg a bekapcsoló gombot! A gomb folyamatos nyomva tartásával tudja őrölni a kávé.
Az őrölt kávé finomsága a szemeskávé mennyiségétől és az őrlési időtől függ. Ahhoz, hogy finoman őrölt kávé kapjon, az alábbi mennyiségeket és őrlési időt javasoljuk:
12g: maximum 20 másodperc; 24g: maximum 25 másodperc; 40g: maximum 30 másodperc
 4. A rövidebb őrlési idő valamivel durvább kávészemcséket eredményez.
 5. Engedje fel a kapcsolót, és várja meg, hogy a penge megálljon, mielőtt a fedelet leveszi!
 6. Soha ne nyúljon a készülékbe, amíg a pengék forognak!
- Javasolt mindig frissen őrölni a kávé, mivel az őrölt kávé idővel elveszítheti aromáját.

TISZTÍTÁS

- Húzza ki hálózathoz a készüléket, majd tisztítsa a tartály részét kefével vagy száraz ronggyal! A fedél rész mosható hideg és meleg vízben is.
- A burkolatot száraz ronggyal törölje le!
- A terméket a tisztítás végén mindig törölje szárazra!
- A pengék tisztításánál mindig fokozott figyelemmel járjon el!
- Ügyeljen arra, hogy a készüléken található biztonsági záróelemet minden használat után alaposan tisztítsa meg, ne hagyja eltömődni azt!

MŰSZAKI ADATOK

Névleges feszültség	220-240 V
Névleges frekvencia	50/60 Hz
Névleges fogyasztás	150 W
Érintésvédelmi osztály	II. osztály

Gyártó/Importőr: Vöröskő Kft., 8200 Veszprém, Pápai út 36.

HULLADÉKKEZELÉS

Használt elektromos és elektronikus berendezések megsemmisítése



Ez a jelzés a terméken és a csomagoláson azt jelzi, hogy tilos háztartási hulladék közé dobni a már nem használt terméket, mivel kifejezetten környezetszennyező. További részletekkel kapcsolatban érdeklődjön a helyi hatóságnál.

Ez a jelzés az Európai Unió teljes területére érvényes. Amennyiben az Európai Unión kívül szeretné megsemmisíteni a terméket érdeklődjön az ezzel kapcsolatos szabályzásokról a helyi hatóságnál.

A CE SZIMBÓLUM



A CE jelölés azt hivatott jelezni, hogy a termék a rá vonatkozó európai uniós előírásoknak megfelel és szabadon forgalmazható az Európai Unió területén.

Instruction manual

dyras

Electric coffee grinder
Model: CFFG-250WH



Before using this device, please read the instruction manual carefully.


IMPORTANT SAFETY INFORMATION

- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Clean the container and lid with a brush or dry cloth. The lid may also be washed in cold or tepid water.
- Do not place a defective appliance into operation.
- To assure safe operation of the appliance, assemble it only according to the information given in the operating instructions and connect it and operate it as directed on the nameplate.
- Remove the mains plug from the wall socket if problems occur during using the appliance.
- When not in use and during cleaning.
- In case of a defect, separate the appliance from the mains

(pull out the mains plug).

- Do not pull on the connection cord, but rather on the plug, to separate the appliance from the mains.
- Avoid contacting moving parts.
- The use of attachments not recommended or sold by the manufacture may cause fire, electric shock or injury.
- Do not pull the connection cord over sharp edges, contact hot surface (including the stove) or use it for carrying.
- Do not pull the connection cord over heated hotplates or open flames.
- Have repairs and manipulations on the appliance performed by a trained filter or by our customer service.
- Grind only coffee or other soft seeds without hard cover in this appliance.
- After you have used the appliance three times without interruption, a pause of around 30 minutes is necessary. Only use the product for a maximum 30 seconds then keep a two-minute break.
- Clean appliance only with a dry or a moist cloth, making sure that you pull out the mains plug first without fail.
- Never immerse the appliance into water or any liquid.
- Sharp blades – handle carefully!
- Unplug before inserting or removing parts.

DESCRIPTION OF PARTS

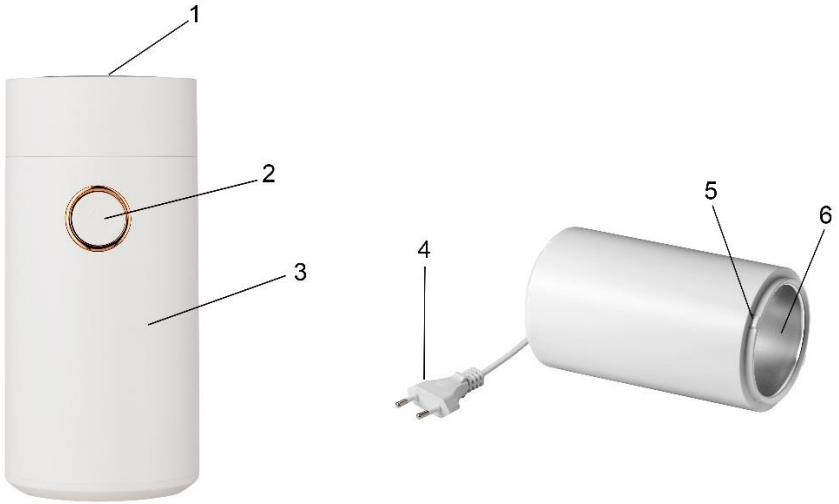

1. Transparent lid
2. On/Off button
3. Housing
4. Power cord
5. Safety lock
6. Coffee chamber

TO GRIND THE COFFEE

1. Before first use, clean the grinder as described in the “Cleaning” section.
2. Fill with the required amount of coffee or spices or nuts (max.40g). Put on the lid and screw it on the place.
3. Press the switch. Press and hold the button to grind the coffee.

The fineness of the ground coffee depends on the quantity of beans and the grinding time.

To obtain ground coffee, the following quantities and times apply: 12g: max. 20 sec; 24g: max. 25 sec; 40g: max. 30 sec.

4. Shorter grinding times result in somewhat coarser coffee grains.
5. Release the switching and wait until the fly cutter comes to a halt before removing the lid.
6. Never touch the blades while they are rotating!

CLEANING

- Remove mains plug. Clean the container with a brush or dry cloth. The lid can be washed in hot and also cold water.
- Wipe the housing with a dry cloth.
- Always wipe the product dry after cleaning.
- Always take extra care when cleaning the blades.
- Be sure to clean the safety lock on the appliance thoroughly after each use and do not allow it to become clogged.

TECHNICAL SPECIFICATIONS

Rated voltage	220-240 V
Rated frequency	50/60 Hz
Rated power	150 W
Protection class	Class II.

WASTE MANAGEMENT

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Manufacturer/Importer: Vöröskő Kft., 8200 Veszprém, Pápai út 36.

THE CE SYMBOL



The CE mark is intended to indicate that the product complies with the relevant European Union standards and can be freely marketed in the European Union.

dyras

www.dyras.hu

Copyright © 2023 The dyras wwe.factory LLC U.S.A.

No parts of the content (including logos, design, photos, text, colour scheme arrangements, etc.) may be reproduced, reused or redistributed for any purpose whatsoever, or distributed to a thirdparty for such purposes, without the written permission of The dyras wwe.factory LLC.

®= registered trademark of Dyras Europe Kft.