Kezelési útmutató

dyras

Filteres kávéfőző
Modell: CM-2097B
220-240V 50/60Hz 730-870W

Kérjük, használat előtt figyelmesen olvassa el a használati útmutatót!

Leírás

1. Fedél
2. Filter tartó
3. Üvegkancsó
4. Melegítő felület
5. Díszítő elem
6. Alsó burkolat
7. Kapcsoló
8. Vízmennyiség-mérő
9. Víztartály

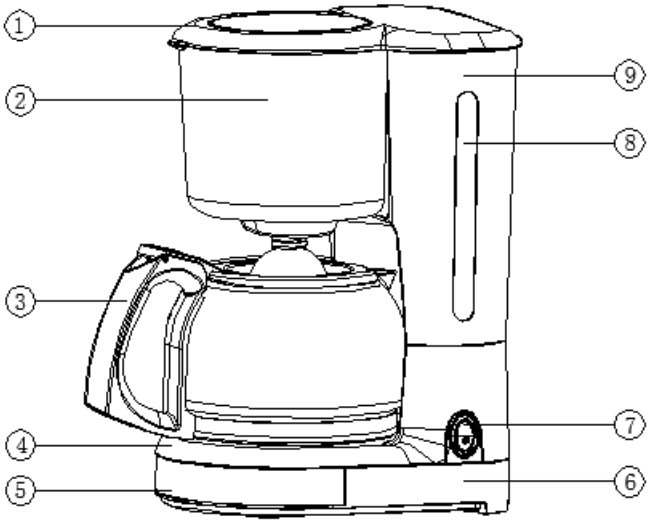

Fontos biztonsági tudnivalók

* Ezt a készüléket kizárólag 8 éven felüli gyermekek használhatják, abban az esetben, ha felügyelet alatt állnak, valamint utasítást kaptak a készülék biztonságos használatához és megértették a vele járó veszélyeket. A készüléket 8 évnél fiatalabb gyerekek előtt tartsa elzárva.
* A készüléket csökkent fizikai, érzékszervi vagy mentális képességekkel rendelkező vagy tapasztalatlan személyek önállóan nem használhatják. Kizárólag felügyelet alatt, abban az esetben ha a megfelelő utasításokat megkapta a készülék biztonságos használatához, és megértette a kapcsolódó veszélyeket.
* A gyermekek nem játszhatnak a készülékkel
* Ha a tápkábel sérült, akkor a veszély elkerülése érdekében keresse fel az értékesítés helyszínét vagy a szakszervizet
* Ez a készülék háztartási és hasonló célokra is szolgál, például:
  -munkahelyi személyzeti konyhájában
  -az ügyfelek által a szállodákban, motelekben és más lakossági típusú környezetekben;
  -Saját háztartásában való használatra
* A készüléket nem szabad vízbe meríteni.
* A fűtőelem felülete használat után is meleg lehet.
* A készüléket az utasításoknak megfelelően használja, az áramütés és más veszély elkerülése érdekében
* Az felületek tisztításával kapcsolatban a <Tisztítás> fejezetben részletes információkkal szolgálunk
* Ellenőrizze, hogy az Ön áramforrása megfelel-e a készüléknek (220-240 V)!
* Ne tegye a készüléket forró felületre.
* Ne használja a készüléket szabadban.
* Áramtalanítsa a kávéfőzőt,
  - ha problémák merülnek fel a kávé készítése során;

- a készülék tisztítása előtt.

* Ne hagyja, hogy a kábel forró felülettel érintkezzen
* A készüléket gyermekektől elzárva használja.
* A készülék bekapcsolása előtt töltse fel vízzel.
* Működés közben a fűtőlap meleg.

Biztonsági funkció

Automatikus kikapcsolás elleni védelem: A gép automatikusan kikapcsol, ha 40 percig be van kapcsolva.

Az első használat előtt

A tökéletes íz elérése érdekében végezzen 2 vagy 3 forralási eljárást friss vízzel (kávé nélkül). Miután az összes víz áthaladt, kapcsolja ki a készüléket, és hagyja kihűlni 5 percig. Ezután ismételje meg a folyamatot friss vízzel.

Kávé készítés

* Töltse fel a víztartályt a szükséges mennyiségű vízzel. Ügyeljen arra, hogy a vízszint ne legyen alacsonyabb a minimális jelnél és ne legyen magasabb a „MAX” jelzésnél. Csak friss, hideg vizet használjon. A csészék száma a víztartályon olvasható.
* Az „1X4” méretű, új, filterpapírba töltse be a kívánt mennyiségű őrölt kávét és helyezze be a kávéfőző filtertartójába.
* Kapcsolja be a készüléket. Várja meg, amíg a főzési folyamat befejeződik és a tartály kiürült.
* Nagy csészék esetén: 5-6 g őrölt kávét szükséges minden csészéhez.

Még több kávét szeretne?

* Ha készített egy adag kávét, és még többet szeretne, kapcsolja ki a kávéfőzőt, és hagyja legalább 5 percet hűlni. Ezután újratöltheti a víztartályt.

Tisztítás

* A készülék tisztítása előtt mindig húzza ki a fő dugaszt a fali aljzatból.
* Soha ne merítse a készüléket vízbe.
* Tisztítsa meg nedves ruhával.
* A kancsó, a szűrő és a tölcsér forró mosogatószeres vízzel mosható.

Vízkőtlenítés

* Rendszeresen vízkőtlenítse a kávéfőzőt.
* Működtesse a készüléket az leírtak szerint. Víz helyett ecetes vízzel töltse fel a víztartályt, és ne töltse meg a tölcsért kávéval.
* Főzze át az ecetes vizet a készüléken, majd – kihülés után – ismételje meg a főzési folyamatot kétszer-háromszor, de most már tiszta vízzel! Öblítse el az üvegkancsót és a kávétartót!

Műszaki adatok

Névleges feszültség: 220-240V
Névleges frekvencia: 50/60Hz
Névleges fogyasztás: 730-870W
Érintésvédelmi osztály (áramütés ellen): I
Gyártó: Vöröskő kft.

Használt elektromos és elektronikus berendezések megsemmisítése	
	Ez a jelzés a terméken és a csomagoláson azt jelzi, hogy tilos háztartási hulladék közé dobni a már nem használt terméket mivel kifejezetten környezet szennyező. További részletekkel kapcsolatban érdeklődjön a helyi hatóságnál. Ez a jelzés az Európai Unió teljes területére érvényes. Amennyiben az Európai Unión kívül szeretné megsemmisíteni a terméket érdeklődjön az ezzel kapcsolatos szabályzásokról a helyi hatóságnál.

Instruction Manual for

Coffee Maker
Model: CM-2097B
220-240V 50/60Hz 730-870W

Please carefully read the instructions before using!

Description

1.Lid
2. Funnel holder
3. Carafe
4. Base
5. Base decorate
6. Bottom Cover
7. Switch
8. Water window
9. Reservoir

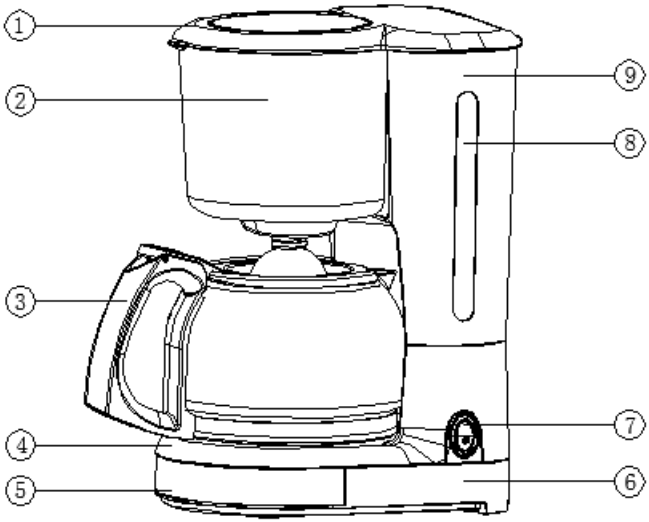

IMPORTANT INSTRUCTIONS

* This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
* Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
* Children shall not play with the appliance
* If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
* This appliance is intended to be used in household and similar applications such as:
  – staff kitchen areas in shops, offices and other working environments;
  – farm houses;
  – by clients in hotels, motels and other residential type environments;
  – bed and breakfast type environments.
* The appliance must not be immersed.
* Heating element surface is subject to residual heat after use.
* Use the appliance according to this instruction, any

misuse may cause electric shock or other hazards.

* Regarding how to clean the surfaces in contact food, please refer to section <Cleaning >.
* Before connecting the appliance, please check if the voltage indicated on the appliance corresponds with the main voltage in your home.
* Do not place the appliance on a hot surface.
* Do not use this appliance outdoors.
* Remove the main plug from the wall socket;
  -if problems occur during making coffee;
  -before cleaning the appliance.
* Do not allow the main cord to come into contact with hot surface.
* Use the appliance out of children reach. Prevent them from pulling the main cord.
* Do pour any water before the appliance has been turned on.
* The heating plate is hot when in operation. Do not touch-risk of severe burn!

Protecting function

Automatic-off protection The machine will turn off automatically when it has been switched on for 40 minutes.

Before first use

For a perfect taste, carry out 2 or 3 boil-processes with fresh water (without coffee). Once all the water has passed through, switch off the appliance and let it cool down during 5 minutes. Then repeat the process with fresh water.

Making coffee

* Fill the water tank with the required quantity of water. Ensure that the water level is not lower than the minimum mark and not higher than indication “MAX”. Use fresh, cold water only. The number of cups can be read on the water tank.
* Insert filter paper size “1X4” if the filter hasn’t been used and fill in the desired quantity of ground coffee.
* Switch on the appliance. Wait until the brewing process is finished and the funnel has run empty.
* For large cups: takes 5-6g of ground coffee each cup.

Making more coffee straight away?

* If you have made one cup of coffee and wish to make some more straight away, please switch off the coffee maker and allow at least 5 minutes for it to cool down. Then you can refill the water tank.

Cleaning

* Always remove the main plug from the wall socket before cleaning the appliance.
* Never immerse the appliance in water.
* You should clean it with a damp cloth.
* The carafe and the filter and the funnel can be washed in hot soapy water.

Descaling

* Descale your coffee maker regularly.
* Operate the appliance as described. However, now use ordinary vinegar to fill the water tank and do not fill the funnel with ground coffee.
* After descaling let the appliance work twice more with only water to rinse away the vinegar and scale remainders.

TECHNICAL SPECIFICATIONS

Rated voltage: 220-240V
Rated frequency: 50 / 60Hz
Rated power consumption: 730-870W
Protection class (against electric shock): CLASS I
Manufacturer: Vöröskő kft.

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

www.dyras.hu

Copyright © 2020 The dyras wwe.factory LLC U.S.A.

No parts of the content (including logos, design, photos, text, colour scheem arrangements, etc.) may be reproduced, resued or redistrubuted for any purpose whatsoever, or distributed to a thirdparty for such purposes, without the written permission of The dyras wwe.factory LLC.

®= registered trademark of Dyras Europe Kft.